

MP3 Digital Voice Recorder

A500E User's Manual



A500E User's Manual

Precautions before use:

- Please charge for 2~3 hours before using for the first time.
- Do not disassemble, once disassembled without warranty.
- Format before the first recording (connected to the computer).
- Recordable time (For reference only)

Recording quality	Hour/GB
192kbs	12
128kbs	18
64kbs	37
32kbs	74



A500E User's Manual

【Appearance description】



A500E User's Manual

【 Button description 】

	Button	Function Description
1	Indicator Light	The light flashes during recording
2	Play/Pause	Play & Pause
3	Save /A-B	Save recording & A-B Repeat
4	REC	Start recording
5	M	Menu & Switching mode
6	VOL	Volume adjustment & Delete files
7		Reverse & Increase volume
8		Fast Forward & decrease volume
9	Power Switch	Power Switch

A500E User's Manual

A. 【Turn on the recorder】

1. Confirm that no charging device is connected.
2. Power-on boot: Power switch to On , voice recorder automatically boot, the screen lights up and standby.
3. Soft boot: When the power switch is on , press (Play/Pause) button for 2 second, the screen lights up and standby.

B. 【Shut down】

1. Soft shutdown : At power on, Press (Play/Pause) button for 2 seconds to shut down.
2. Power-off shutdown : Power switch to OFF to shut down.

(Do not recommend doing so, this may result in lost files)

- ✧ Remarks : If you do not use the Recorder for a long time, please power switch Off after soft shutdown.

A500E User's Manual

C. 【Recording】

1. when the Recorder is on , press “ REC ” button ,
the device will directly enter the recording mode
and start recording.

① In the course of recording, press (Play/Pause)
button to pause recording.



② Press (Play/Pause) button again to continue
recording.

2. Save recording files : in the course of recording,
press “Save ”button to save the current
recording file.



① After saving, press (Play/Pause) button directly
to play the current recording file.

A500E User's Manual

D. 【Recording settings】

1. In standby mode, press “M” button, the device will directly enter the setting mode.
2. Press  or  button to select “ Record set ”.
3. Press “ M ” button enter and select item.(System Time, Record type, Record Gain Set,VOR on/off, Monitor,REC From, LED Set, Auto Record)

① System Time

- A. Press “ VOL ” button to select item
(year/month/day/hour/minute)。
- B. Press  or  button to adjust. Press “ VOL ” button Complete and skip to the next item.
- C. After all the time setting · press “ M ” button Save and exit time settings.

A500E User's Manual

② Record type

A. Press  or  button to select item.

✧ The higher the value, the better the recording quality.

③ Record Gain Set

A. Press  or  button to adjust.

✧ Higher values indicate higher sensitivity.

④ VOR on/off(VAR)

A. Press  or  select on or off.

✧ When VOR on mode, detects voices will be recorded.

⑤ Monitor

A. Press  or  select on or off.

✧ When VOR on mode, can be monitored through headphones when recording.

⑥ REC From

A. Press  or  select Mic Record or
Phone Record(LINE-IN Record)

A500E User's Manual

✧ Phone Record requires an optional recording kit
(not included)

⑦ LED Set

A. Press  or  select on or off.

✧ When the indicator is off, it will not light during recording.

⑧ Auto Record

A. Press  or  select on or off.

✧ When the Auto Record is on , the first line is the start time, the second line is to set the length of the recording.(In minutes)


E. 【 Music/Recording file playing 】

1. when the music or recording file playing is stopped, press and hold “M” to switch between music and voice modes.

① Volume adjustment

A. in music/recording file playing mode, press “VOL” button.



A500E User's Manual

B. Press  or  button to increase or decrease volume.

② Music file switching/fast forward and backward

A. when the music or recording file playing

hold  or  button for fast forward or backward,

Press  or  button to switch to the previous or next file.

③ AB repeat adjustment

A. when the music or recording file playing

press "A-B" button, select A-B start point of AB repeat.

B. At this time B on the screen starts flashing .



press "A-B" button again to select end point of AB repeat.

A500E User's Manual

C.start repeating the part of music file between A and B; in the course of repeating, press "A-B" button to end the repeating function.

F. 【Play setup】

1. when the music or recording file playing press "M" button to enter setting mode.

2. With "Play mode & EQ" can be set, press  or  button to switch and press "M" button to select.

3. Play mode: Press  or  button to select

Repeat one 、 Repeat All 、 Normal four modes to play.



◇ Note: the EQ function is not supported for recording files.

A500E User's Manual

G. 【Delete Files】

1. when the music or recording file playing is stopped,
press and hold "VOL" button to display

"DELETE"

2. In delete mode , press  or  button to
switch and press "M" button to select Delete file
or Delete All.

✧ Please use the delete function with caution, it
cannot be restored after deletion.

H. 【Settings】

1. In standby mode, press "M" button, the device
will directly enter the setting mode.

2. Press  or  button to select " Settings ".

3. Press " M " button enter and select item.

(Contrast, Backlight time, Sleep time, Language,

A500E User's Manual

Password switch, Password set, Restore factory Settings) .

① Contrast

A. Press  or  button to select.

✧ The higher the value, the brighter the screen.

② Backlight time

A. Press  or  button to select.

✧ The higher the value, the longer the backlight time.

③ Sleep time

A. Press  or  button to select.

✧ The higher the value, the longer the standby time.

A500E User's Manual

④ Language

A. Press  or  button to select.

✧ Support traditional Chinese/Simple Chinese/English.


⑤ Password switch

A. Press  or  select on or off.

✧ Password can be set when password switch is on.

⑥ Password set

A. Can set a four-digit password.

B. After setting the password · press and hold  button to shut down and Save settings.

✧ If you forget your password, you can enter 9999 after booting, long press ab to crack the password.

A500E User's Manual

Charge and discharge related matters

Charging for 3~4 hours

Recording 192kbs	About 900 mins
Recording 128kbs	About 1000 mins
Recording 64kbs	About 1200 mins
Recording 32kbs	About 1400 mins

(0.5A charger for charging · Recording time is for reference only)

Product specifications

Model	A500E
Battery life	15 hours(Best quality)~23 hours(Normal) for Recording
Power supply	Rechargeable lithium battery
Recording format	High quality PCM lossless · WMA
Signal to noise ratio	>70db
Distortion	0.05%
Headphone output	10mW+10mW 320hm

A500E User's Manual

USB jack	USB 2.0
Frequency response	20Hz~20KHz
Operating temperature	-5~40 degrees Celsius
Net weight	60g
Dimension	90x25x13 mm

- ✧ We only provides hardware warranty and maintenance for this machine, please back up your data before sending it for repair.