

 
MP3 Digital Voice Recorder

IJ330 User's Manual






IJ330 MP3 Digital Voice Recorder


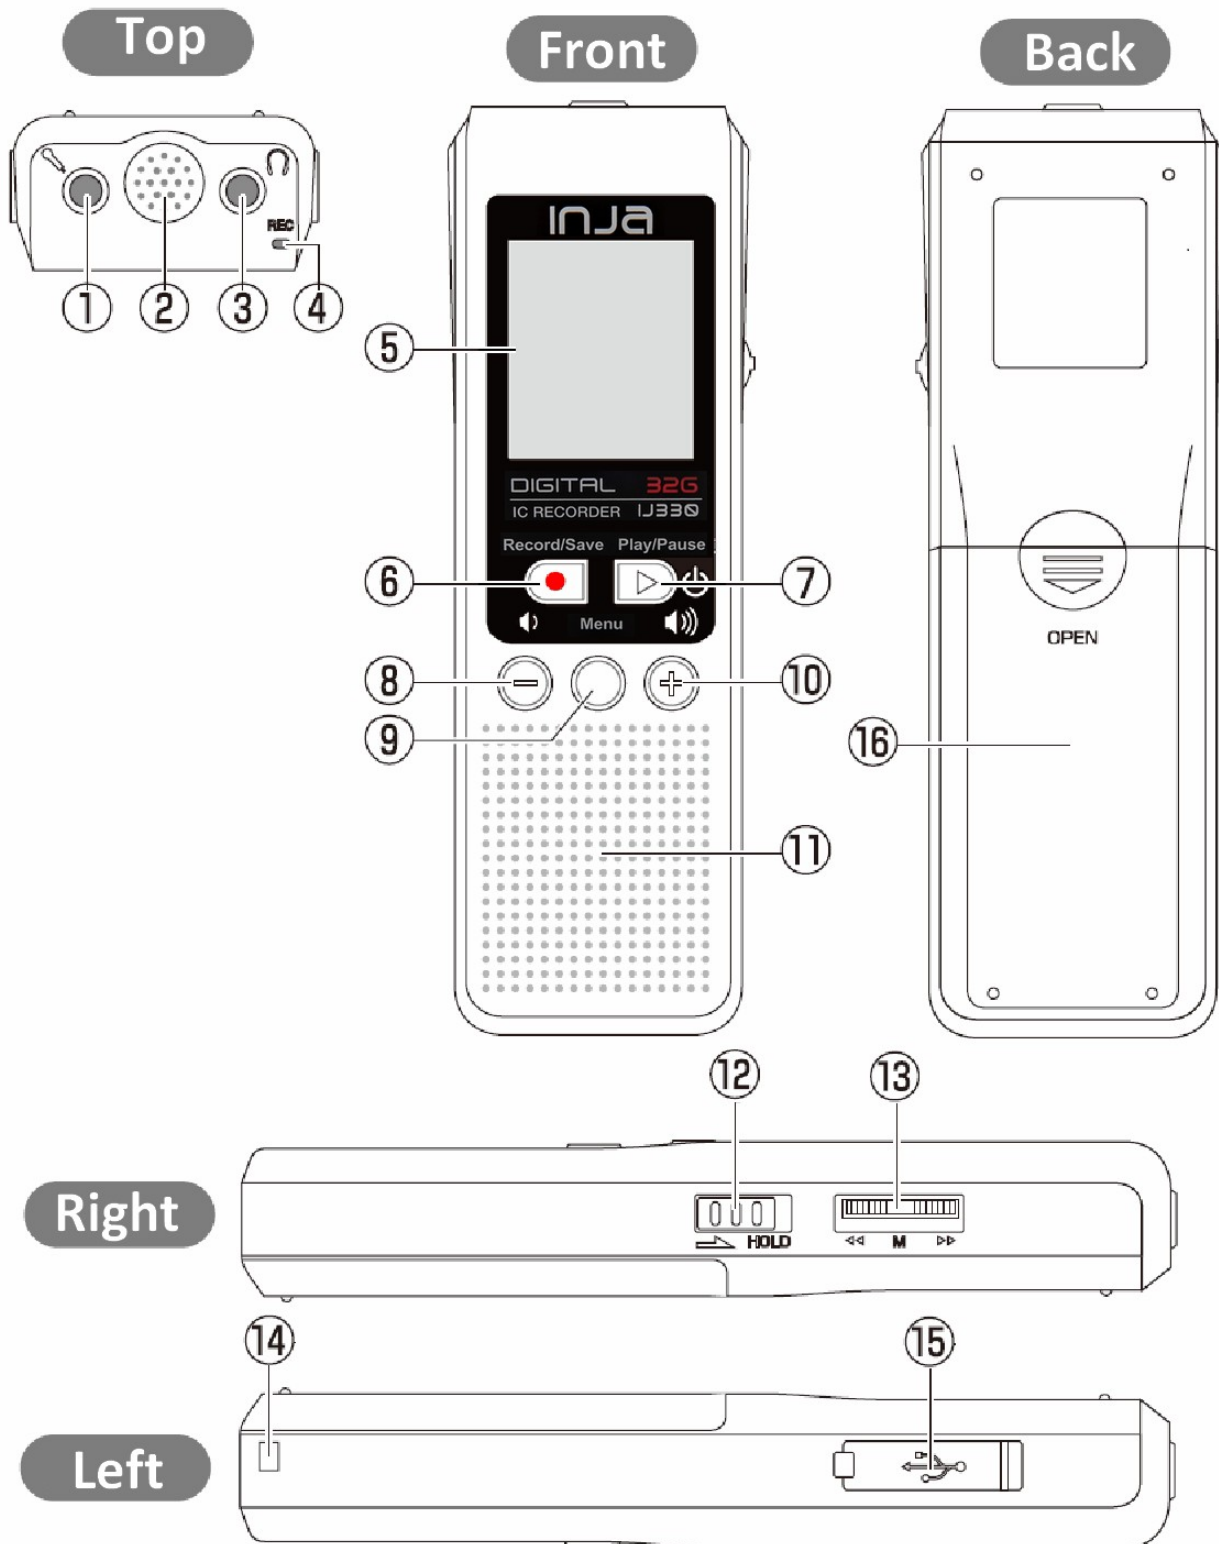
【Appearance description】

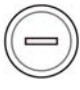

【 Button function description 】

	BUTTON	function
1	MIC hole	External microphone
2	Built-in microphone	Built-in microphone
3	Headphone jack	Plug in headphone
4	Indicator Light	
5	Screen	Display status
6	Record/Save	Start recording/save recording
7	Play/Stop/Power	
8	Decrease volume	 Decrease volume
9	Menu/Return	 Menu/Return to the previous screen
10	Increase volume	 Increase volume
11	Speaker	Speaker
12	HOLD	Key lock
13	Scroll wheel	Scroll selection/confirm (Press)
14	Hanging hole	Hanging hole
15	Micro USB jack	Transfer data
16	battery cover	AAA x 2


Button operation instructions

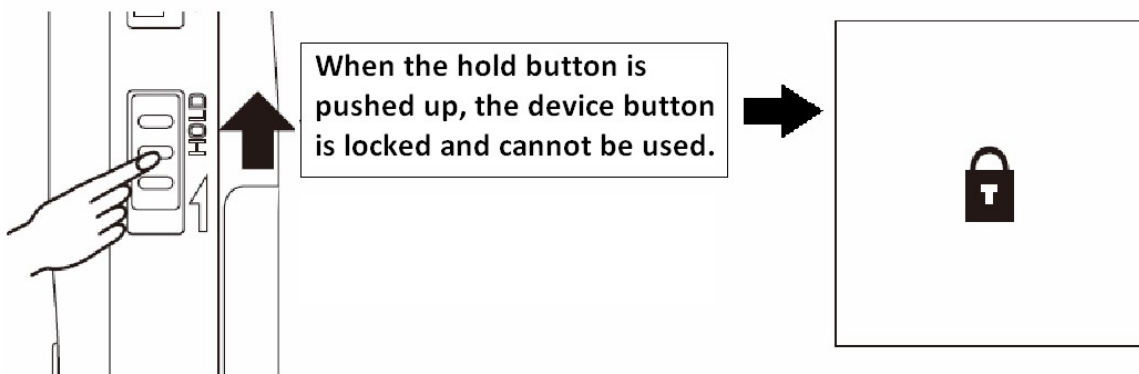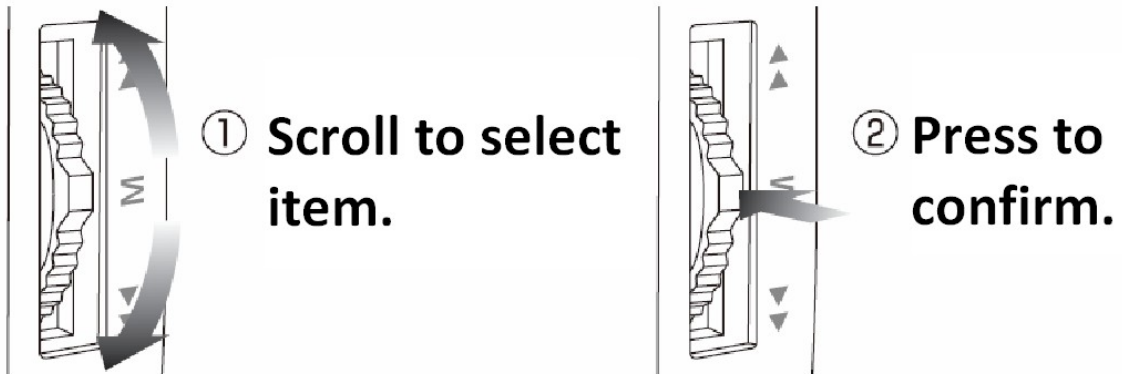

Basic operation



I. 【Install battery】

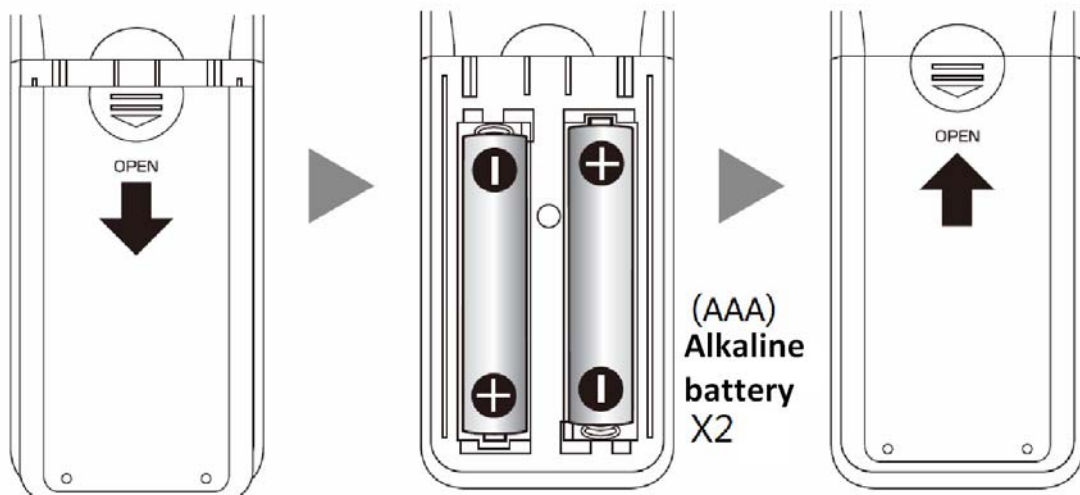1. Push the battery cover in the direction of the arrow :



2. Put two AAA batteries in the battery holder and return the battery cover.
3. Available battery types: Alkaline battery / rechargeable battery.
4. If the battery is low, it will not work properly. Please replace the battery.

II. 【Turn on/Turn off】

1. When device is off, press and hold button  for 3 seconds to turn on.
 2. When device is on, press and hold button  for 3 seconds to turn off.
- **In standby mode, it automatically shuts down after 120 seconds.**
 - **Turn off the screen backlight after 30 seconds of inactivity, and enter sleep mode after 10 seconds.**
(Change time by yourself in system setting)
 - **Please remove the battery when the recorder is not used for a long time to avoid battery leakage damage device.**


III. 【Screen description】

Image A: Play/Delete MUSIC files in folder.


Image B: Recording folder/Recording setting.

Image C: System settings.


Image D: Playing recording/music files

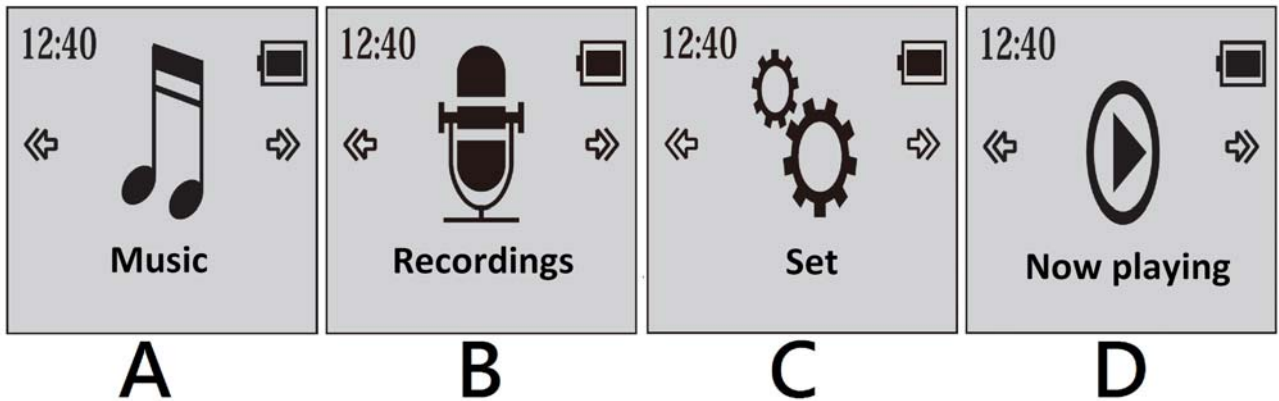

1. Music player interface

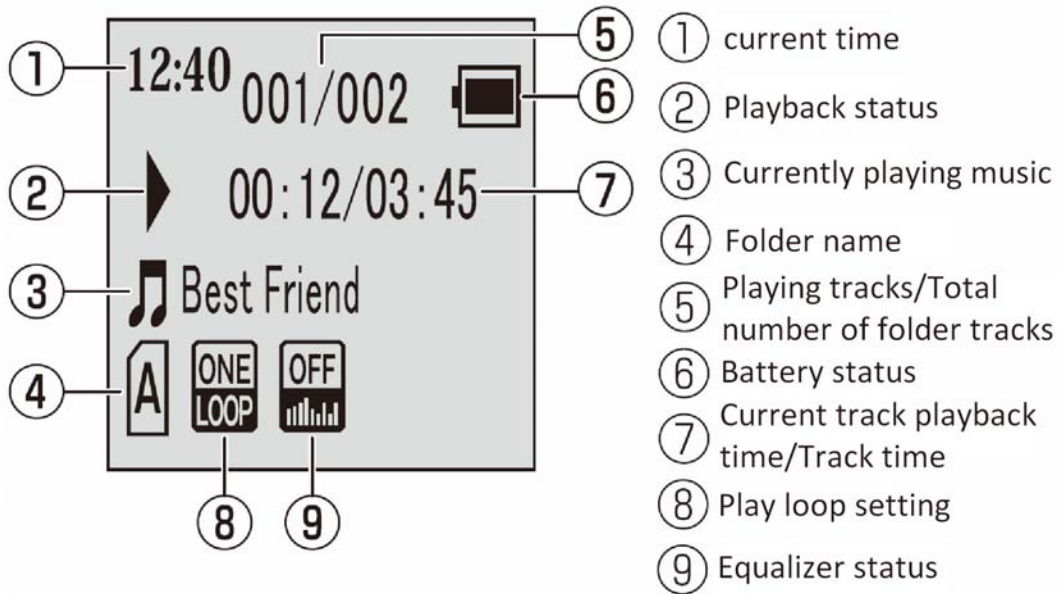


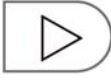
2. Recording player interface

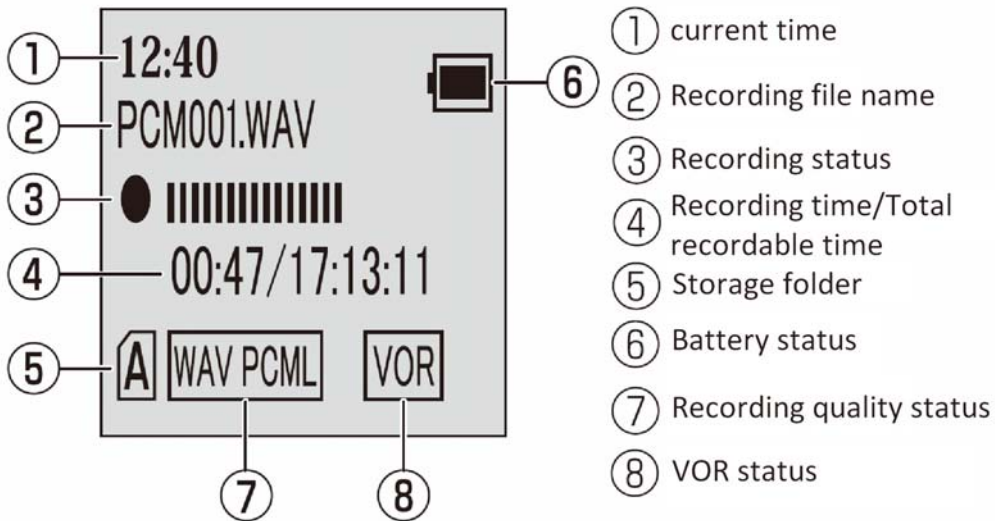



3. Battery status



IV. 【Recording】

1. Voice recorder turn on the power · press  button, the device will directly enter the recording mode and start recording.(red light is on)
2. In the course of recording, press  button to pause recording.


V. 【Save recording files】


1. In the course of recording ,press  button to save the current recording file.
2. After saving, press, press  button directly to play the current recording file.

VI. 【Record settings】


Select the Recordings icon on the main Screen, select the Record settings to enter.

➔Toggle scroll to select

➔Press scroll wheel =  =

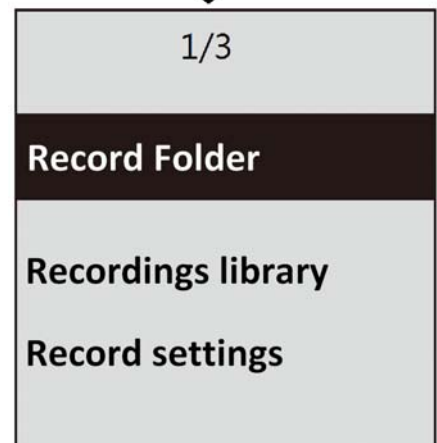


confirm

Push  button back to the previous page.

- Record Folder:
 1. There are A/B/C/D folders to choose.
 2. Determine the folder saved after recording.
- Recordings library:

Select an existing recording file in the recorder.
- Record settings:

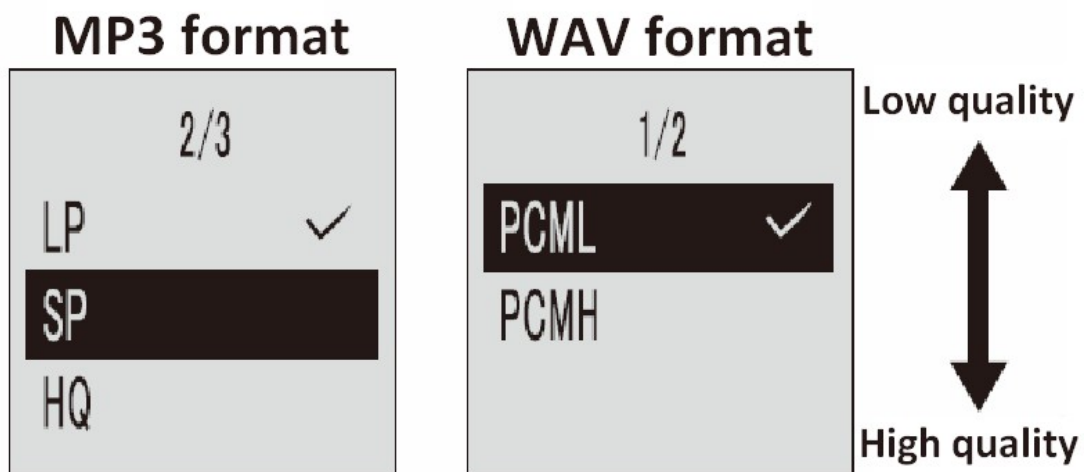

1. Record Format(MP3 Rec/WAV Rec)
 - A. MP3 Rec:LP/SP/HQ
 - B. WAV Rec:PCML/PCMH
2. Tarck AVR mode
 - A. AVR is on, recording with sound and automatically pause when quiet.

✧ **Please turn off the AVR function for important**

occasion recordings.


3. set recording scene

- A. normal scene
- B. train scene
- C. meeting scene
- D. long range scene
- E. disable noise cancellation

4. Record Subsection

Automatically save files at intervals during recording.

- A. Always on (File is not split)
- B. 30 minutes C. 60 minutes D. 90 minutes

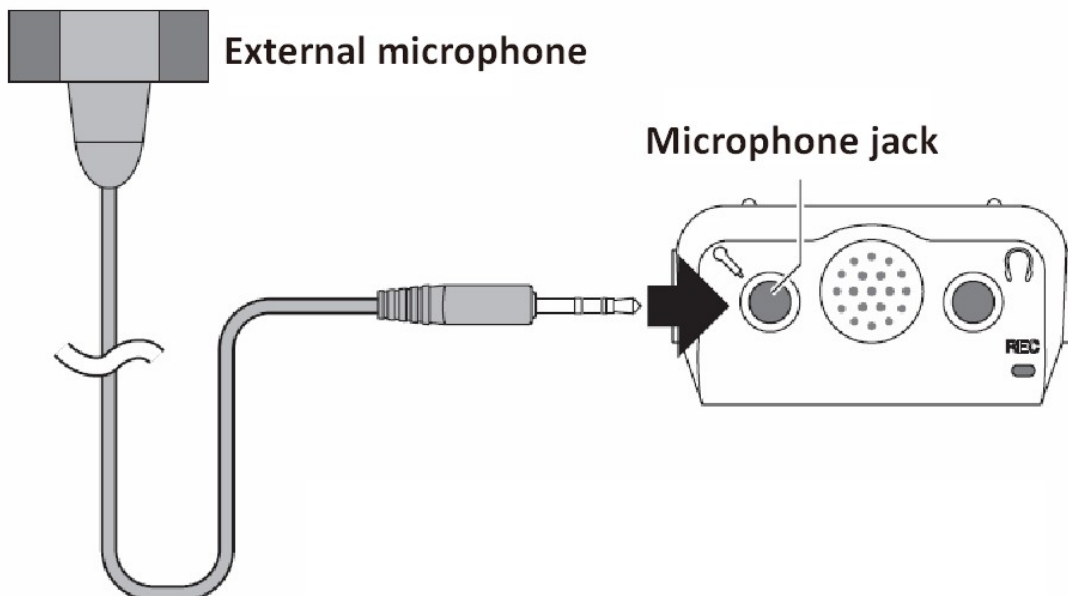

5. Monitor Switch (Recording monitor)


You can use the headset to monitor the recording instantly.

➤ The default value is close.

VII. 【Music】

Select the Music icon on the main Screen,
select the Music to enter.

➔ scroll to select

➔ Press scroll wheel =  =

confirm(Play music)

Push  button back to the previous page.




● **After entering, the music in the music folder will be displayed.**

1. Select song to confirm and play.




2. Press the scroll wheel to enter the setting mode while playing music.

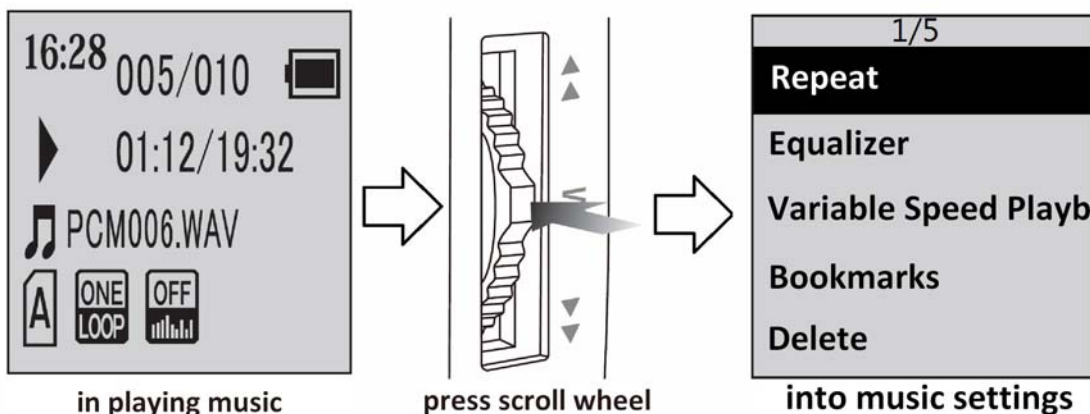✧ Playing recording files/music files, Press scroll wheel into music settings.



● Music settings mode

1. Repeat

Repeat one 	Repeat the same music .
Repeat all 	Repeat all music in the folder.
View playing 	Repeat the first ten seconds of all music in the folder.

1. Equalizer:

- A. OFF
- B. ROCK
- C. Funk
- D. Hip Hop
- E. Jazz
- F. Classical
- G. Techno


✧ **The status of the EQ icon is shown as ON**

2. Variable Speed Playback


- Default 0, adjustable value -8 to 8.

3. Bookmarks

- A. Add bookmark (Maximum 10)

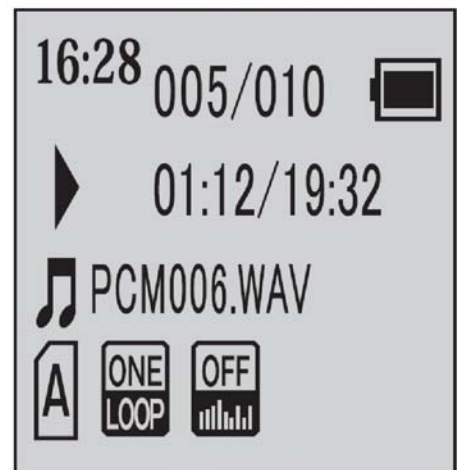

↓ Enable EQ function

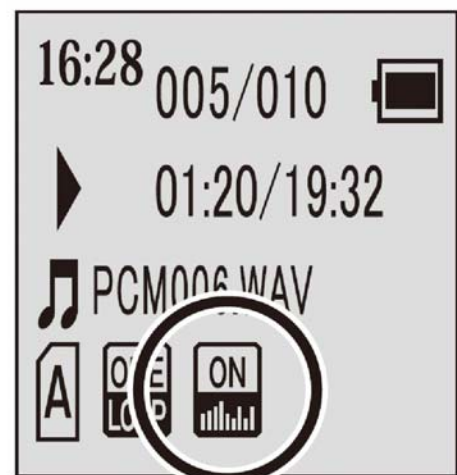




B. Goto bookmark

C. Delete bookmark


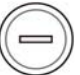
4. Delete

- Delete the currently playing file

● A-B Repeat

1. Playing recording files/music files, press recording button  to choice A-B repeat starting point, A on the screen will start to flash.
2. Press recording button  again to choice A-B repeat ending point, and start to repeat between the A-B points.
3. Press recording button  again to end A-B repeat function.

● Volume adjustment

1. Playing recording files/music files, press volume button  or  to Reduce or increase the volume.


● Play file switch /Fast Forward or reverse


1. Playing recording files/music files, scroll and hold wheel to fast forward or reverse.


2. Scroll wheel to switch playing files.

VIII. 【Set】



Select the Set icon on the main Screen.

Press scroll wheel =  = confirm

Push  button back to the previous page.

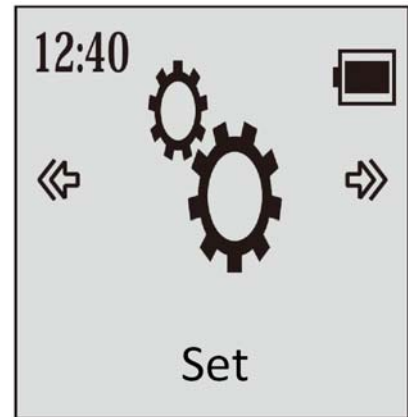

- There are ten options in the set:

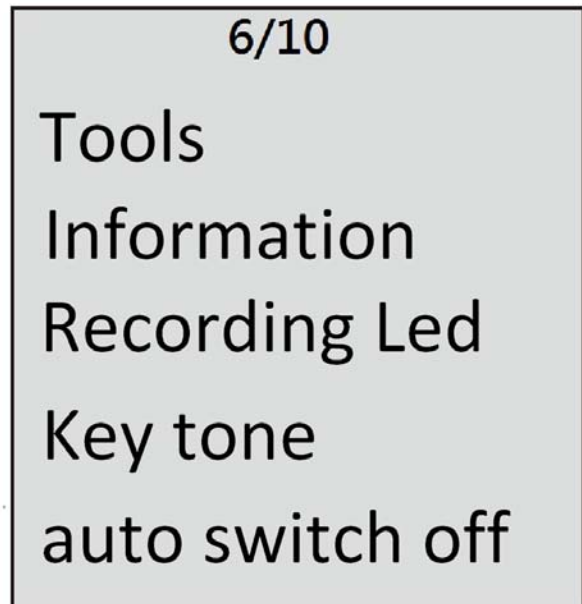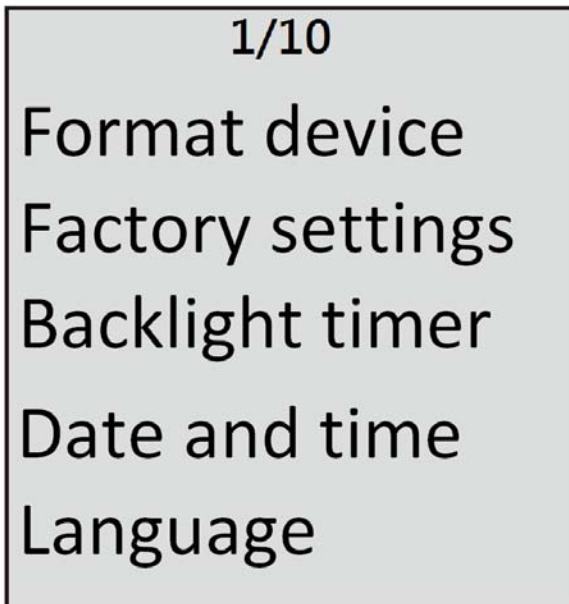

1. Format device

- Select "Yes" to format device and delete all files.

2. Factory settings

- Select "Yes" to restore factory settings.

3. Backlight timer

- Set screen backlight duration in standby mode.

A.10 seconds

B.20 seconds

C.30 seconds

D.Always on


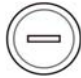
4. Date and time

- Set time/Set date

5. Language

- Select language(Japanese/simplified Chinese/traditional Chinese/English)

6. Tools

- Set Alarm
 - A. Alarm(on&off)
 - B. Alarm time
 - C. Alarm cycle: Once/Daily/Work day
 - D. Alarm music
 - E. Alarm volume: Use   button to increase or decrease volume.

7. Information

- Device information
- Disk space

8. Recording LED

- Led On/Led Off(The light is located next to the headphone jack.)

9. Key tone

- Set button volume

- A. 0:Mute
- B. 1: Turn on key tone(whisper)
- C. 2: Turn on key tone(louder)

10.Auto switch off

- Set the time for automatic shutdown in standby mode
 - A. 0 seconds(Turn off automatic shutdown)
 - B. 30 seconds
 - C. 60 seconds
 - D. 90 seconds
 - E. 120 seconds
- ✧ **When the value is 0,the device does not automatically shut down, but the screen will turn off and in standby mode. In this state, the device continues to consume power.**

Recording time			
WAV	PCML	512kbs	30 hours
	PCMH	1536kbs	24 hours
MP3	LP	32kbs	50 hours
	SP	128kbs	18 hours
	HP	192kbs	18 hours

- ✧ Use SONY 900mAh 1.2V AAA Rechargeable Battery *2 test.

IJ330 MP3 Digital Voice Recorder

Product specifications

Model	IJ330
product	MP3 Digital Voice Recorder
Power supply	AAAx2 (Alkaline battery /rechargeable battery)
Recording format	MP3/WAV
S/N	>70db
Distortion	0.05%
Headphone output	10mW+10mW 320hm
Frequency response	20Hz~20KHz
Net Weight	40g
Dimension	110x36x20mm