

Wide-angle Low illumination Sport  
Cam(720P HD)  
**MD03 PLUS instruction**



## MD03 PLUS Sport Cam Instruction

### Precautions

- Please charge 4 hours after receiving the product.
- Do not remove the micro SD card during the shutdown process to avoid data damage.
- Do not disassemble the device, in order to avoid loss of warranty.

### 【About Micro SD Card】

- Please use a micro SD card of Class10, 8GB or higher. This device supports up to 32GB Micro SD card.
- Please format the micro SD card before using it.
- Recorded in Micro SD card as follows:

( For reference only )

Micro SD card	VIDEO	VOICE
16GB	180 mins	45 hours
32GB	360 mins	90 hours

## MD03 PLUS Sport Cam Instruction

( This data is related to the storage space of the memory card, and battery unrelated )

### Start using

#### 1 · Power-ON:

Switch ON/OFF button to ON, press ■/● button to boot. Orange light will light up after about 3 seconds to enter standby mode.

#### 2 · Power-OFF:

In standby mode, press and hold ■/● button about 5 seconds then device will shut down.

The other way is to automatically shut down the device after about 1 minute without operating, and switch power button to OFF to turn off the power.

## MD03 PLUS Sport Cam Instruction

**【 LED indicator 】** ( Standby mode can be adjusted with M key )

Indicator light	Standby	Executing
Video Recording	Orange light	Orange light flashes-in video recording
Photograph	Blue light	Blue light flashes- Take a picture
Motion Detection	Blue light & Orange light flashes	Orange & blue light flashes - Performing motion detection
Voice Recording	Orange light & Blue light flashes	Orange & blue light flashes-in voice recording
Charging	Blue light flashes	Orange & blue light flashes- Power full

## MD03 PLUS Sport Cam Instruction

### 3 · Video Recording:

A. Switch ON/OFF button to ON and press ■/  
● button then orange light is on. Press ■/  
● button again, then orange light flashes  
and starts recording.

B. Press ■/● button to end video recording  
and enter standby mode.

- When recording a video for a long time, the device automatically saves a file every three minutes. the device will automatically delete the first file while the memory card is full. °

The video will be stored in the VIDEO directory on the memory card .

### 4 · Photograph:

A. Switch ON/OFF button to ON, and press ■/  
● button then orange light is on. Press M  
button then blue light is on in Photograph  
mode.

## MD03 PLUS Sport Cam Instruction

- B. Press ■/● button to take a photo. Each time you press ■/● button, the blue light will flash once and take a picture.

The photo will be stored in the IMAGE directory on the memory card.

### 5 · Motion Detection(Dynamic)Function:

- A. Power-ON and in standby mode(orange light),then press M button twice(Blue light & Orange light flashes),press ■/● button to Motion Detection.
- B. Other operations are the same as Video Recording.

The video will be stored in the VIDEO directory on the memory card.

### 6 · Voice Recording:

- A. Power-ON and in standby mode(orange light), then press M button three

## MD03 PLUS Sport Cam Instruction

times(Orange light & Blue light flashes). Press ■/● button to record voice.

- B. Press ■/● button to end voice recording and enter voice recording standby mode.

The voice will be stored in the AUDIO directory on memory card.

### 7 · Charging:

The camera will not turn on when the battery is low (protected state).

The device buld-in Rechargeable lithium battery, can be charged in the following ways:

Switch Power to ON

- A. Charging with a computer: connect the computer with usb cable, blue light flashes while charging.

※Please remove usb cable about 4 or 5 hours later after charging with computer.

## MD03 PLUS Sport Cam Instruction

B. Charge with charger: connect the charger with usb cable, blue light flashes while charging.

※Please remove usb cable about 3 hours later after charging with charger.

◇ Blue light flashes while charging, blue light and orange light flash together after charging is complete.

8 · Video recording while charging:

The device support video recording and charging at the same time, please follow the steps below:

1. Plug in the memory card, and switch Power to ON.
2. Connect with usb cable, blue light flashes while charging.

A. Video Recording: Press ■/● button while blue light flashes to enter video recording status(yellow light is on).



## MD03 PLUS Sport Cam Instruction

- B. Photograph: Press ■/● button while blue light flashes then press M button again to enter Photograph status(blue light is on).
- C. Motion Detection: Press ■/● button while blue light flashes then press M button twice to enter Motion Detection status(blue light is on and yellow light flashes).
- D. Voice Recording: Press ■/● button while blue light flashes then press M button three times to enter Voice Recording status(yellow light is on and blue light flashes).
- In A or C status, press ■/● button to record video while charging.

### 9 · Update date and time:

There is a "Update date and time" directory on memory card, please follow the steps by instructions in the directory.

Or download from:

<http://injatek.com/support.htm>

## MD03 PLUS Sport Cam Instruction

### Specification

Lens angle	120 degrees	
Video Format	AVI	
Video Encoding	MJPEG	
Photograph	JPG (1280x1024)	
Loop Recording	support	
Voice Recording	mode	HP:768Kbps
	time	3 hours/GB
	format	WAV
Video Recording	mode	720P HD,1280x720
	time	12 mins/GB
	format	AVI
Power supply	built-in Rechargeable lithium battery	
Battery life	Video recording for 160-200 mins Voice recording for 8-10 hours	
Motion Detection	support	

✧ We only provides hardware warranty and maintenance for this machine, please back up your data before sending it for repair.