# 1080P WIFI DASH CAM Q7 Instructions





# Contents

Attention	2
About Usage	2
About Micro SD Card	2
Start Using	3
LED indicator	3
Car Camera Overview	4
Suction Cup Installation	5
Buttons	6
About App	7
Connect phone	7
WCVR-PWD	8
Trouble Shooting 2	2

#### Attention

#### 【About Usage】

- To avoid breaking down the file recorded, do not eject the Micro SD card immediately.
- The car camera lens is on the best condition before leave the factory, please do not reverse by yourself.

## [ About Micro SD Card ]

- Please use Micro SD card with the size memory at least 16GB, Class 10 (Up to 32GB).
- Be sure to format Micro SD card before usage.
- The following information is the card capacity and recording time (Reference only).

Micro SD Card	1080P 30fps
16GB	100 min
32GB	200 min

#### Start Using

#### [Manual Power On]

- Do not connect anything.
- Insert Micro SD card into slot.
- Power device on, blue light on.

## [ Power Off ]

- Press power button for a while, it will power off.
- Device standby three minute(APP settings), it will power off automatically.
- To avoid breaking down the file recorded, do not eject the Micro SD card immediately.

		Definition
Power	Blue	On—Standby
Record Red		Blinking—Recording
Nic	Vallaur	On—Mic working
IVIIC	TellOW	Off—Mic Off

#### 【LED indicator】



- 4.Wi-Fi LED
- 8.Micro USB slot
- 12.Suction

connector Nut

# [Suction Cup Installation]

1. Install Suction cup into nut and connect the holder.



Suction Cup



# [Buttons]

	Button	Function
	WIFI	Power ON/OFF, Wi-Fi ON/OFF, Pause
	Оміс	Mic ON/OFF
•	Press WIFI t	o power on.
•	When devic	e stand press WIFT to power off.
•	Short press	,device will start recording when
	both power	light and Wi-Fi light on or off.
•	When powe	er light turn on, Wi-Fi light blinking, short
	press WIFI	o close Wi-Fi.
•	When powe	er light blinking, Wi-Fi light turn off, short
	press WIFI	o start recording.
•	When pow	er light blinking, Wi-Fi light on, short
	press WIFI	o stop recording.
	The device v	will be turn off Wi-Fi automatically when
	<u>it didn't conr</u>	nect the smart phone success after 1
	<u>minutes.</u>	
•	Short press	<b>MIC</b> to turn on/ off Microphone.
	<u>The devic</u>	e will remember the Mic stats
	automatically	when power off.

### About APP

#### Minimum System Requirement: Android 4.0 / iOS 6.0

M1 equips with basic settings and modes selection, you can add more functions through APP, below examples are based on **iOS** for your reference.



Searching and downloading " WCVR-PWD " from App Store or Google Play or Market scan below QR code to get " WCVR-PWD " APP.



#### **Connect Phone**

Turn on Wi-Fi on your phone, find and connect Wi-Fi "**iSONICO**", When connected, just run "**WCVR-PWD**" software is ok.

#### WCVR-PWD

1. Enable WiFi mode, the connection name will be shown.



2. Start Recording, the video will be saved in SD Card.



#### 1. Start recording, Flashing red



#### 2. Click to enter Setting Mode



# 3. Setting Mode

<	Settings	
Resolution	1080P	>
Time Display	On	>
Motion Detectior	n Off	>
Loop recording	10 Minutes	>
Record Audio	Off	>
Auto power off	3 Minutes	>
Frequency	60Hz	>
Exposure	+0.0	>
Park Mode	Not Support	>
Gsensor	Not Support	>
Set Time		>
Auto Set Time		>
Format		>
WiFiSettings		>

Setting	Resolution	
1080P	(1920×1080)	<
720P	(1280×720)	
WVGA	(800×480)	
VGA	(640×480)	





Settings Loop recording
Off
1 Minutes
2 Minutes
3 Minutes
5 Minutes
10 Minutes
How many minutes of Video



Settings	Auto power off	
Off		
1 Minutes		
3 Minutes		~
Αι	uto Power Off	
OFF/ 1	. Minutes/ 3 Minute	es

Settings Frequency	
50Hz	
60Hz	~
Frequency 50Hz/60Hz	

Settings Auto Set Time	
Sure	
Cancel	
Automatic update Date & Time	

Settings	Set Time	Done
	3	21
2014	4	22
2015	5	23
2016	6	24
2017	7	25
2018	8	26
2019	9	27
ē 7	30 31	53
8	32	54
10	34	56
11	35	57
12	36	58
13	37	59
14	38	
16	40	
Manually u	pdate Date	e & Time

Sett	ings Exposure	
+2.0		
+5/3		
+4/3		
+1.0		
+2/3		
+1/3		
+0.0		~
-1/3		
-2/3		
-1.0		
-4/3		
-5/3		
-2.0	Exposure compensation (+2.0)~(-2.0)	

Settings	Format
Sure	
Cancel	
	Format SD Card



Settings	WiFiSettings	Done			
IP	192.168. 100 .1				
Channel	1 2 3 4				
AP SSID	WCVR_59				
KEY					
Change Camera's WiFi					
name & password					



#### 4. Recording mode & Preview mode



#### 5. Preview mode



#### 6. Click download the photo to the phone.

<返[		/DCIM/	Û
0	MOVI0006.avi 13.95 MB	2016/01/05 17:32:20	
0	MOVI0005.avi 22.02 MB	2016/01/05 17:32:06	
0	MOVI0004.avi 49.77 MB	2016/01/05 17:31:46	
0	MOVI0003.avi 19.39 MB	2016/01/05 17:30:36	
0	MOVI0001.avi 2.52 MB	2014/01/31 00:00:34	
0	MOVI0000.avi 5.33 MB	2014/01/31 00:00:22	



#### **Trouble Shooting**

- Q1 : My Q7 won't switch on when my car starts up.
- A1 : 1.Please ensure the USB car charger LED is always lighted and the connector is properly inserted to X5's power port.
  - 2.Before using, please charge X5 for at least 3 min, long push the Power on/off, Main Menu Button for 10 seconds to reboot. (It is not recommended to use a cigarette multiple ports expansion set for charging, that may supply insufficient power. )
- Q2 : Q7 starts up or shuts down frequently without manual operation.
- A2 : If the USB car charger LED is not always lighted, please check if the USB charger has bad connection to the car cigarette power jack.
- Q3 : When I shut down the car, Q7 won't switch off automatically.
- A3 : Please check if the USB car charger is always lighted, as some cars still supply power when the engine is switched off, you can prevent unnecessary power consumption.

- by: 1. Remove the USB car charge
  - Install an auto switch off cigarette power supply to your car, please contact your vehicle maintain facility.
- Q4: I need more cigarette power ports for other devices in my car.
- A4: We recommend you to purchase a cigarette multiple ports expansion set to use. Please check your total max power consumption before purchasing the expansion set, for your safety, an expansion set with higher power and national safety certification is strongly recommended.
- Q5 : Slight vibration is observed when playing back recorded files.
- A5 : 1. Your car may vibrate during idling and driving. The vibration amplitude varies with engine and shock absorbers. In certain cases, Q7 may vibrate in sync with your car.
  - 2. Tighten each screws of your Q7. Consult your car supplier if the vibration is overly noticeable.

- Q6 : Fuzzy images can be found in recorded files after proper installation.
- A6 : 1. Make sure the windshield/Q7's lens is clear. Dirty or greasy window glass will lead to images of poor quality.
  - 2. Improper installation location may lead to fuzzy images caused by too large bevel within the windshield.
- Q7 : When playing recorded files with computer, there are noticeable halts observed.
- A7: 1. Make sure your computer is powerful enough for the playback. The recommended computer configuration is CPU 2.0GHz with more than 1GB memory.
  - 2. Try stop running some of your resident programs.
  - 3. Please use SD card of level C10 or higher.
  - 4. Try copying your recorded files to the computer before playing them.