1920x1080 WIFI Dual-lens DASH CAM T3 Instructions



Attention


- That the device does not have a battery, Please connect the power supply.
- If the time of car DVR is wrong, connect the car DVR with your smart phone via Wi-Fi.
- Open the app, the time will update auto, if not, you can set the by yourself.
- The videos in app is not as good as the video on SD card ,if you want to watch the 1920x1080 video ,you have to unplug the SD card ,then plug it to your smart phone or use a SD card reader to watch the videos on your computer .
- The car DVR need to plus a TF card (support Max 32G) to record.
- Hidden Non-destructive Installation Designed for the original car style, Do not block the line of sight, Take power from the fuse box, hidden the wires, Integration with the vehicle. It will work when you start your car and stop when you unplug your car key. No built-in lithium battery, avoid battery explosion risk.

- Loop recording, powerful IC, Loop recording, you can set the video fragment as 1minute / 2 minutes / 3 minutes / 5 minutes / 10 minutes, overwrite the fragments recorded before, if the storage is full. Support 8G 32G Micro SD card.
- Support iOS and Android APP manipulation. Built-in Wi-Fi module, Broadcom AP6181, you can watch the recorded videos, download the videos, share the videos from the DVR to your Android phone or iPhone, just via Wi-Fi, not waste your internet flow.
- Built-in G-Sensor, save the important video when crash, sudden braking to a special folder to avoid it was overwrote.

Powerful function of Wi-Fi:


- Wi-Fi Processor TX 1057 & Wi-Fi Module Broadcom AP6181.
- The phone & tablet accept 1:1 screen resolution immediately transport form Wi-Fi.
- Don't require compression FPS.

Dash Cam Overview

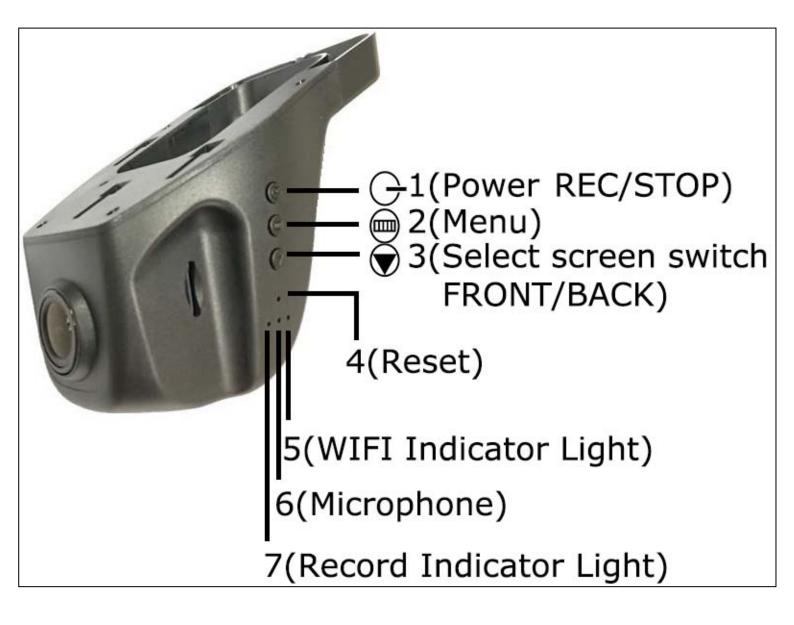

Disconnect the WIFI before using the button operate

Installation

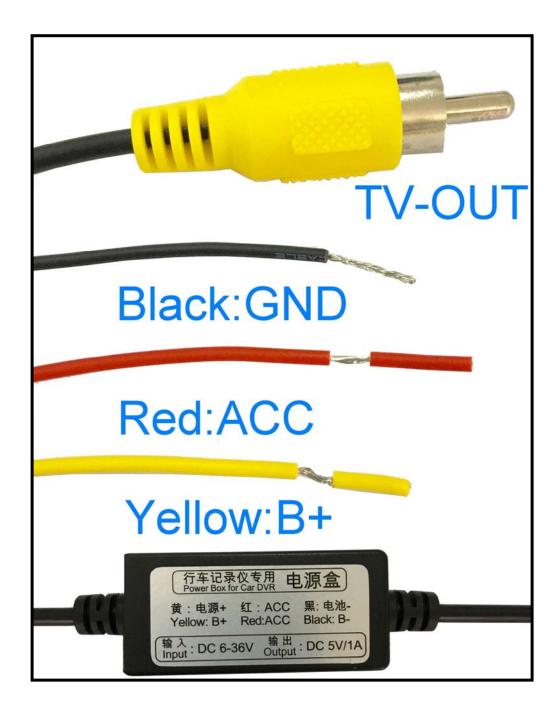

About APP

Minimum System Requirement: Android 4.0 / iOS 6.0

T3 equips with basic settings and modes selection, you can add more functions through APP, below examples are based on iOS for your reference.



Searching and downloading "WCVR-PWD" from App Store or Google Play or Market scan below QR code to get "WCVR-PWD" APP.







Connect Phone

- Turn on Wi-Fi on your phone, find and connect Wi-Fi "WCVR_XXXXX", when connected, just run "WCVR-PWD" software is ok.
- When the mobile phone APP has been connected, but the screen has been unable to display, please refer to the following two ways to solve.
 - 1. Re-place the TF card to restart
 - 2.May have a strong WIFI signal interference, please try to change the location of re-connection

WCVR-PWD

1. Enable Wi-Fi mode, the connection name will be shown.



Start Recording, the video will be saved in SD Card.



2. Start recording, Flashing red.



3. Click to enter Setting Mode.



4. Setting Mode

<	Settings	
Resolution	1080P	>
Time Display	On	>
Motion Detection	Off	>
Loop recording	10 Minutes	>
Record Audio	Off	>
Auto power off	3 Minutes	>
Frequency	60Hz	>
Exposure	+0.0	>
Park Mode	Not Support	>
Gsensor	Not Support	>
Set Time		>
Auto Set Time		>
Format		>
WiFiSettings		>

Setting	Resolution	
1080P	(1920×1080)	<
720P	(1280×720)	
WVGA	(800×480)	
VGA	(640×480)	

Settings	Time Display
Off	
On	~
Record	ding time display
	ON/OFF

Setting	s Motion Detection	
Off		~
On		
Мо	otion Detector ON/OF	F


Settings	Loop recording	
Off		
1 Minutes		
2 Minutes		
3 Minutes		
5 Minutes		
10 Minutes		~
How ma	any minutes of Vide	eo

Settings Auto power off	
Off	
1 Minutes	
3 Minutes 🗸	
Auto Power Off	
OFF/ 1 Minutes/ 3 Minutes	

Settin	ngs	Record Audio	
Off			~
On			
	Voice	e Record ON/OFF	

Settings Free	quency
50Hz	
60Hz	~
Frequency	50Hz/60Hz

Settings	Format	
Sure		
Cancel		
Fc	rmat SD Card	

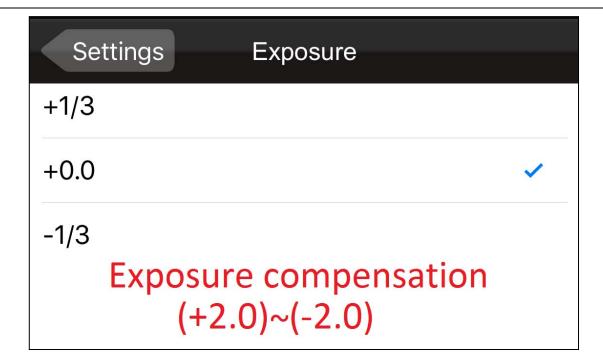


Settings	Set Time	Done
2015	5	23
2016	6	24
2017	7	25
10	34	56
11	35	57
12	36	58
Manually update Date & Time		

Settings	Auto Set Time
Sure	
Cancel	
Automati	c update Date & Time

Settings	WiFiSettings	Done
IP	192.168. 100 .7	1
Channel	1	
	3	
AP SSID	WCVR_59	
KEY		
Chai	nge Camera's Wi	Fi
nam	e & password	
Settings	Save To	
Download to	APP Folder	~
Download to	Photo Album	
Selec	t download folde	er

5. Recording mode & Preview mode

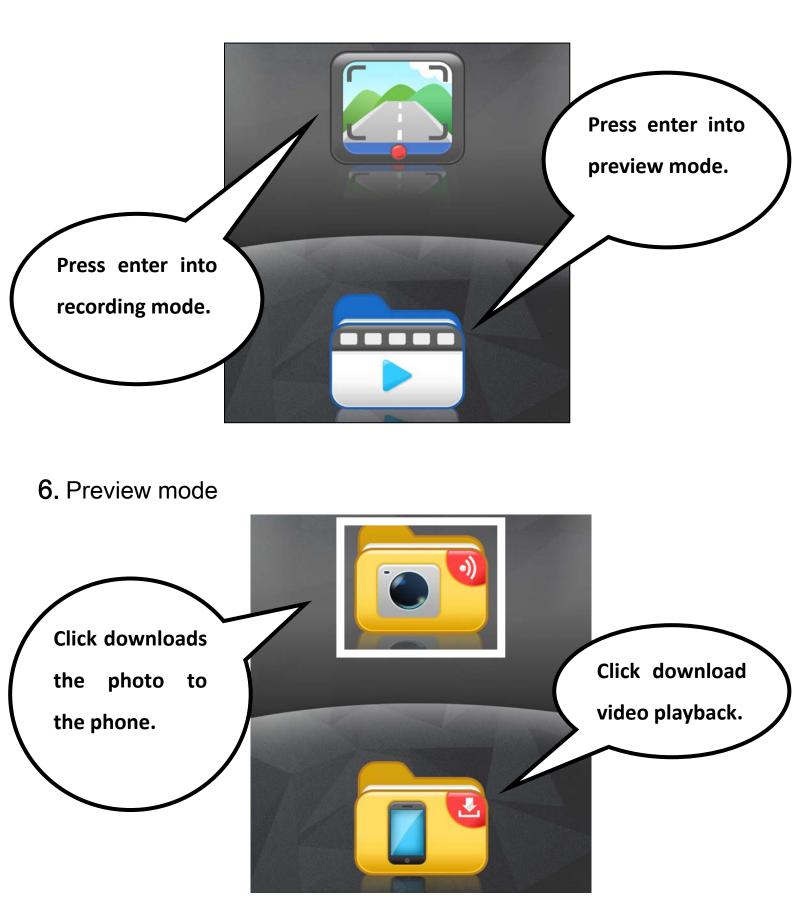

7. Click downloads the photo to the phone.

く返[/DCIM/	Ê
	MOVI0006.avi 13.95 MB	2016/01/05 17:32:20	
	MOVI0005.avi 22.02 MB	2016/01/05 17:32:06	
0	MOVI0004.avi 49.77 MB	2016/01/05 17:31:46	
0	MOVI0003.avi 19.39 MB	2016/01/05 17:30:36	
0	MOVI0001.avi 2.52 MB	2014/01/31 00:00:34	
	MOVI0000.avi 5.33 MB	2014/01/31 00:00:22	

7. Press to download which you want.

< 返[L 📀
	MOVI0006.avi 13.95 MB	2016/01/05 17:2:20
0	MOVI0005.avi 22.02 MB	2016/01/05 17:32:06
0	MOVI0004.avi 49.77 MB	2016/01/05 17:31:46
0	MOVI0003.avi 19.39 MB	2016/01/05 17:30:36
0	MOVI0001.avi 2.52 MB	2014/01/31 00:00:34
0	MOVI0000.avi 5.33 MB	2014/01/31 00:00:22

3

Trouble Shooting

- Q1 : My T3 won't switch on when my car starts up.
- A1 : 1. Please ensure the USB car charger LED is always lighted and the connector is properly inserted to T3 is power port.
- Q2 : Slight vibration is observed when playing back recorded files.
- A2: 1. Your car may vibrate during idling and driving. The vibration amplitude varies with engine and shock absorbers. In certain cases, T3 may vibrate in sync with your car.
- 2. Tighten each screws of your T3. Consult your car supplier if the vibration is overly noticeable.
- Q3 : Fuzzy images can be found in recorded files after proper installation.
- A3: 1. Make sure the windshield/T3's lens is clear. Dirty or greasy window glass will lead to images of poor quality.
- 2. Improper installation location may lead to fuzzy images caused by too large bevel within the windshield.

- Q4: When playing recorded files with computer, there are noticeable halts observed.
- A4:1. Make sure your computer is powerful enough for the playback. The recommended computer configuration is CPU 2.0GHz with more than 1GB memory.
- 2. Try stop running some of your resident programs.
- 3. Please use SD card of level C10 or higher.
- Try copying your recorded files to the computer before playing them.

Package Contents

To check the items in your package with the list below, If any of

the below items is damaged or missing, contact your retailer.



Features				
Lens and aperture	Fixed focus 2 meters, 4 glass lenses. F2.6			
Image sensor	Illumination CMOS sensor			
Viewing angle	Wide-angle 120 degrees			
Video	1920 x 1080@30fps,1280 x 720@30fps			
resolution settings	1/4" HD CMOS			
Operation Display	No screen, use the car DVD navigation screen, can be connected via WIFI phones and tablets			
Video Output	By car DVD AV IN / AUX channel input			
Monitoring methods	Motion detection, auto start recording, shut down automatically save			
Loop recording	Cycle time is adjustable, automatic loop recording does not leak seconds			
Night photography	Support low-light photography			
Video Format	AVI			
Exposure Compensation	Adjustable			
White Balance	automatic			
microphone	-42db± 2			

г	
WIFI Specifications	2.4Ghz ,(802.11 a, 802.11b , 802.11g)
WIFI effective distance	5 meters
WIFI security	you may change the account password yourself
Phone APP version Operation	iPhone iOS 8.0 (or more), Android 4.0 (or more)
Video wireless transmission	Video files can be uploaded directly to your phone
Memory card	Memory Stick Micro ™ (Mark 2) 或 Micro SD/SDHC (class6 above) Max 32GB
Recording time	1080p: 8 minutes / GB, 720p: 12 minutes / GB
Compatible computer system	Windows Vista and 7, Mac OS X 10.5 or newer version, USB 2.0
TV output	NTSC AV cable
Operating temperature	-20~70°C
Dynamic Sensor	G-sensor
Power supply	12V battery buck (INPUT: 12V-24V; OUTPUT: DC5V / 1A)
Accessories	12V battery buck line / User's Guide
LED lights	Two-color status indicator (blue: Power / Red: recording)