

Wide-angle Low illumination Video
Recording Pen (720P HD)

V700 instruction



V700 Video Recording Pen

Precautions

- Please charge 2-3 hours after receiving the product.
- Do not remove the micro SD card during the shutdown process to avoid data damage.
- This device supports loop recording function, when the memory card capacity is insufficient, the oldest recorded file will be automatically cleared. Please pay special attention.

【About Micro SD Card】







- Please use a micro SD card of Class10, 8GB or higher. This device supports up to 32GB micro SD card.
- Please format the micro SD card before using it.
- Video and voice can be recorded in Micro SD card as follows.

VIDEO 、 VOICE	Per 1GB
Voice HP:768Kbps	3 Hours
Voice LP:32Kbps	72 Hours
Video 720P HD	9 mins

V700 Video Recording Pen


Start using

【 Button description 】

Button	Function Description
	Soft boot/Shut down 、 Play/Pause
 ON OFF	Power on/off
 MENU	Menu 、 A-B Repeat 、 Delete files
	Wheel button 、 Volume adjustment 、 Previous/Next 、 Return
 SAVE/REC	Recording/Save file
 VOICE/VIDEO	Voice/Video switch 、 Web Cam/ Flash drive switch

A. 【 Manual boot 】


1. No charging device connected.
2. Insert the micro SD card into the memory card slot.


3. Switch  button to the ON position, press 

V700 Video Recording Pen

button to power-on, the screen lights up and enters the standby.

B. 【Shut down】

1. method one(power-off): turn  button to the OFF position.

2. method two(soft shut down):press and hold  button to shut down.

3. Remove the micro SD card after the power is completely turned off to avoid recording data corruption.

C. 【Video Recording】

1. Switch  button to the VIDEO position.




2. Then switch  button to the REC position and start to record video.

3. Switch  button to the SAVE position, and

V700 Video Recording Pen






save video file.

D. 【Voice Recording】

1. Switch  button to the VOICE position.
2. Then switch  button to the REC position and start to record voice.
3. Switch  button to the SAVE position, and save voice file.

E. 【File playback】

1. Recording files and MP3 playback


- ① In standby mode, switch  button, a dot will appear at the top of the screen.
- ② Press  button to enter playback mode.
- ③ Switch  button to select Previous file/next file.
- ④ Press  button to play file.
- ⑤ Press  button to enter volume

V700 Video Recording Pen


adjustment status (Volume symbol flashes), at

this time, Scroll  to adjust the volume.

2. A-B Repeat

① When playing music, press  button to select A-B point.

② After selecting the A-B point, the A-B interval will be repeated.

③ Press  button again to cancel A-B Repeat state.

3. Delete files


① In Playback mode, press  button to enter delete files mode. (DELETE text lights up).

② Select ALL(DELETE ALL) or ONE(DELETE ONE).

- Deleted file can not be restored, please use this function with caution.


V700 Video Recording Pen

F. 【Setting】

- In standby mode, press and hold  button to MENU mode.

1. Voice recording and video recording indicator light on/off.


① In MENU mode, LED (ON&OFF) display on screen.

② Switch  button to select LED (ON or OFF).

③ Press  button to save settings.

2. Select voice recording quality

① In MENU mode, LED (ON&OFF) display on screen.

② Press  button, type(HP&LP) display on screen.

③ Switch  button to select type(HP

V700 Video Recording Pen


or LP).

➤ HP mode:WAV high quality format
(768Kbps,48KHz).

➤ LP mode:MP3 format(32Kbps,16KHz)

④ Press  button to save settings.

G. 【Return to standby mode】

1. Not in the video and voice recording state ,
press and hold  button(2 secs),
return to standby mode (Display date and
time on screen).

Device connected to computer

【Flash drive mode】

In the Power-off state,switch  button to
VOICE.

Use the included usb cable to connect the device
to the computer,then a new disk(memory card on
device) will appear on the computer.

V700 Video Recording Pen

【 PC CAM mode 】

In the Power-off state, switch  button to VIDEO.

Use the included usb cable to connect the device to the computer and enable PC-CAM mode.

Download video software at this website:

<http://goo.gl/AtYXPR>

【 Update date and time 】

The device connect to computer then enter flash drive mode. Follow the steps to execute the time update program in the memory card.

【 Mp3 music storage location 】

In flash drive mode,MP3 music files save to AUDREC directory to play music.

V700 Video Recording Pen

Specification

	Model	V700 Video and Voice Recorder
	Storage	Support TF/MicroSD card,32G max
Video	Format	AVI
	Encoding	MJPEG
	Resolution	HD(720P,1280x720)
	Loop Recording	Automatically save a file every 5 mins
	Battery life	150 mins
Voice	Format	WAV/MP3
	File segmentation	Automatically save a file every 10 hours
	Battery life	HP: 9 hours LP: 13 hours
	Power supply	Rechargeable lithium battery
	Net weight	40g
	Dimension	105mm* 25mm*15mm

✧ We only provides hardware warranty and maintenance for this machine, please back up your data before sending it for repair.